

# **SkyBridge Max**

**Quick Start Guide** 

Dear Amateur Radio Operator,

Welcome to the BridgeCom Community! We are so lucky to have a customer like you!

Join our BridgeCom Facebook group to be part of an active community with over 15,000 members that love to answer technical questions:


https://www.facebook.com/groups/BridgeComSystems

## **Account Registration and Setup**

Before you begin, you will need:

- 1. A DMR ID
  - a. Register for one at <a href="https://www.radioid.net/">https://www.radioid.net/</a>
- 2. A BrandMeister account
  - a. Register for one at: <a href="https://brandmeister.network/">https://brandmeister.network/</a>
  - b. The account type should be: **Personal User Account**
  - c. Under "Anti Spam" the answer to the question, "What is the wavelength of the UHF band in centimeters?" is: **70**
  - d. After registering with BrandMeister, you will receive an initial confirmation email within a few minutes. Be sure to check your spam folder if you haven't received anything in your inbox.
  - e. You must click the link in the email to begin the registering process.
  - f. It takes a certain amount of time for BrandMeister staff to approve your newly created account. Once it has been approved, you will receive an additional email indicating that your account is active.
  - g. Once your BrandMeister account is active, log in to it, and in the upper right corner of the screen,

click on your callsign. This will open a menu, and next, click **SelfCare**.

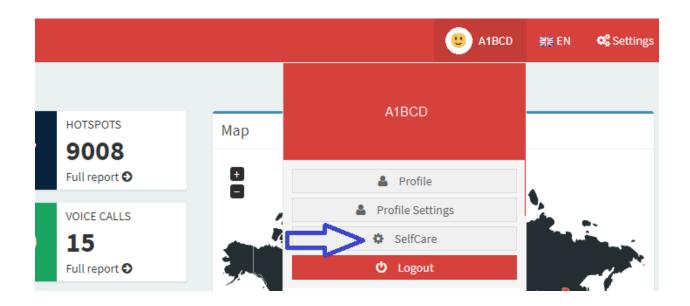

h. Scroll down to the section labeled **Hotspot Security** and type in a simple alphanumeric string that you will easily remember. Then click the **Save Password** button. A popup will appear to confirm the setting of this password.

Hotspot Security		
Enter new Password		
	Save Password	


■ You will need this password later when setting up your SkyBridge, so be sure to keep a record of this information somewhere safe. For convenience, we have included a space to write this information down below. Note that all passwords are case sensitive!

Callsign	
DMR ID	
BrandMeister Account Password	
BrandMeister Hotspot Security Password	

Note: You may also use other DMR networks with your SkyBridge after registering with them. However, we do not currently offer direct support on this.


#### **Initial Setup**


1. Screw the included antenna into your SkyBridge and plug one end of the provided Ethernet cable into the RJ-45 port on the side. Plug the other end into your network switch/router. The SkyBridge needs an active network connection with internet access to fully boot.

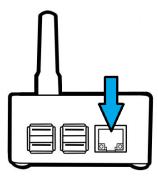

2. Plug the included wall power supply into an electrical outlet, plug the larger USB Type A end of the power cable into the power supply, and plug the small USB Type C end of the cable into your SkyBridge. After displaying a brief splash image, your SkyBridge will display

Initializing... for up to 2 minutes.



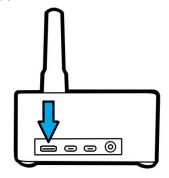


- a. Note: Do not use the included battery at this time. Fully charge the battery before using it. See the **Using the External Battery** section for more information.
- 3. Once fully booted, the screen on your SkyBridge will populate with information. Note the IP address displayed in the upper-left corner. On a computer or smartphone connected to the same local network as the SkyBridge, type this number into your internet browser.



4. You will be directed to the dashboard page as shown below. Click **Admin**.



5. You will likely be prompted for a username and password. Enter **pi-star** as the username and **raspberry** as the password.

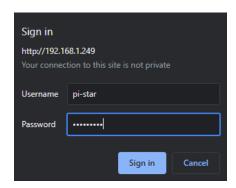

6. If entered correctly, you will be directed to the admin page. Click **Configuration** at the top. This will take you to the Configuration page.



7. It is recommended to run an update before configuring. Do this by clicking **WPSD Update** at the top of the screen. You will be taken to a page with a console output window that will automatically perform the update. Wait until the text indicates that updates are finished.

```
Updates complete, syncing disk cache...
[√] Update Process Finished!

Back to Dashboard...
```

Scroll to the top of the page and click **Configuration.** 

8. Many of the settings have been pre configured as part of the stock SkyBridge setup and do not need to be adjusted. However, there are settings that need to be configured for each individual. Enter the following:

#### **Under General Configuration:**

a. Node Callsign: Your callsign

b. DMR/CCS7 ID: Your DMR ID

c. Radio Frequency: If using a different frequency, set to the simplex frequency you are using

# **Under Location and Hotspot Info Settings:**

- d. Town and Country are self-explanatory.

  Latitude: A positive value indicates North, and a negative value indicates South.

  Longitude: A positive value indicates East, and a negative value indicates West.
- e. URL: By default, this is set to your QRZ page. If desired, you can change this to an alternate webpage.

#### **Under MMDVMHost Configuration:**

- f. DMR Mode is turned on by default. If you are not using your hotspot for DMR, turn this off.
- g. Turn on the other digital modes that you will be using. We do not offer direct support on setting up other digital modes, but there are great resources on the internet that provide guidance on doing this.

#### **Under DMR Configuration:**

h. For normal use with DMR, DMR Master should be set to **DMRGateway**.

- i. BrandMeister Master should be set to the following:
  - Western US:BM 3103 United States
  - Central US: BM\_3102\_United\_States
  - Eastern US: BM\_3104\_United\_States
  - Other locations: Set this to a server to the closest geographic location to you. You can find the location of the servers on the BrandMeister website.
- j. BM Hotspot Security: Set this to the same password that you set earlier in the **Account Registration and Setup** section of this quickstart guide.
- k. BrandMeister Network ESSID: If you are using multiple hotspots that you want to treat independently, this allows you to use a single DMR ID to accomplish this. If this is the only hotspot you plan on using, leave this set to **None**.

- l. Enable and configure the other DMR networks you plan on using. BrandMeister is currently the largest DMR network, and currently the only network we offer direct support on configuring. Information on configuring other DMR networks can be found on their respective websites.
- m. DMR Color Code: Unless you are using a code plug configured to a different color code, leave this set to **1**.
- n. Node Type: In most cases, this should be set to **Private**. If you want to share this hotspot with others, you will need to enter a comma-separated list of all the DMR IDs in the **DMR Access List** box and click **Apply Changes**. Then you can set the **Node Type** to **Public**. This precaution is put in place to prevent network loops.
- o. Click any of the **Apply Changes** buttons. After several seconds, the screen will refresh.
- p. Click **Dashboard** at the top of the page. This will take you to the main dashboard page. If everything is configured correctly,

**DMR** and **DMR Net** should now be green as shown below.

Mode Status		
D-Star	DMR	
YSF	P25	
M17	NXDN	
DMR X-Mode	YSF X-Mode	
POCSAG		
Network Status		
D-Star Net	DMR Net	
YSF Net	P25 Net	
M17 Net	NXDN Net	
DMR2NXDN	DMR2YSF	
YSF2DMR	YSF2NXDN	
TOFZUMK		
YSF2P25	APRS Net	

- i. If **DMR Net** is red, there is likely an invalid DMR ID entered.
- ii. At the bottom of the page, if the entry under **DMR Master** is red, there is likely a mismatch between your actual BrandMeister hotspot security password and the password you entered when configuring your SkyBridge. Refer to


the password that was created in the **Account Registration and Setup** section, and be sure the password entered in the **BM Hotspot Security** field matches.

- q. You are now ready to perform a Parrot test and make contacts!
  - i. A Parrot test is not necessary, but it verifies that everything is set up correctly, and that audio quality is desirable. To perform a parrot test, simply initiate a private call to ID 9990 on timeslot 2 with your radio. If you purchased a code plug or a Plug and Play Package from us, a channel for this is already built in.


## **Proper Shutdown Procedure**

The SkyBridge is a computer with an OS running on it. Therefore, simply pulling the power plug without properly shutting it down may cause file corruption.

- 1. Follow steps 3-6 in the **Initial Setup** section of this quickstart guide to log in to your SkyBridge.
- 2. Click **Power** at the top of the page.

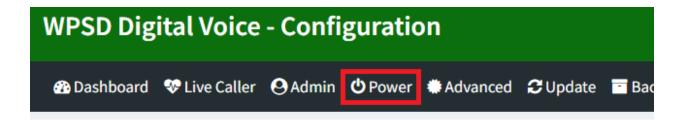


3. Click the button under **Shutdown** and wait 60 seconds before unplugging your SkyBridge.

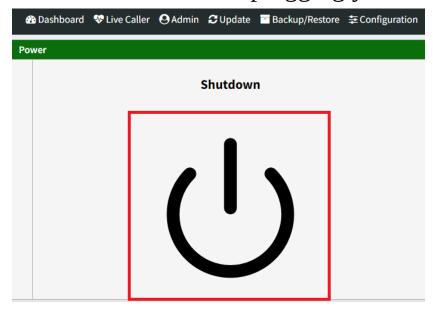

## **WiFi Configuration**

The SkyBridge can be configured to connect to the internet through a WiFi connection. To set this up, follow the steps below.


- 1. Follow steps 3-6 in the **Initial Setup** section of this quickstart guide to log in to your SkyBridge.
- 2. Scroll down to **Wireless Configuration**, click the **Scan & Add Available Networks** button.

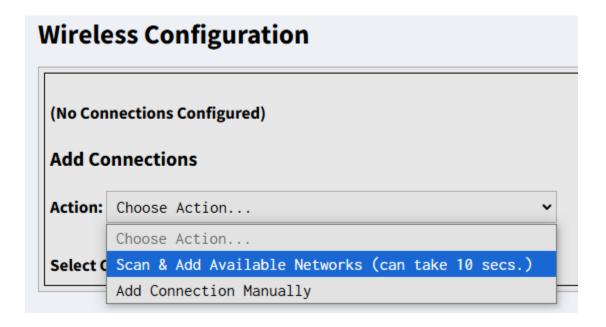

3. Wait approximately 10 seconds until nearby network connections populate in the list below. Enter the passphrase (if applicable) next to your network name. Then click **Add This Network**.



This will store the network and cause it to appear above. If configured correctly, it will automatically connect. Rebooting is not necessary.

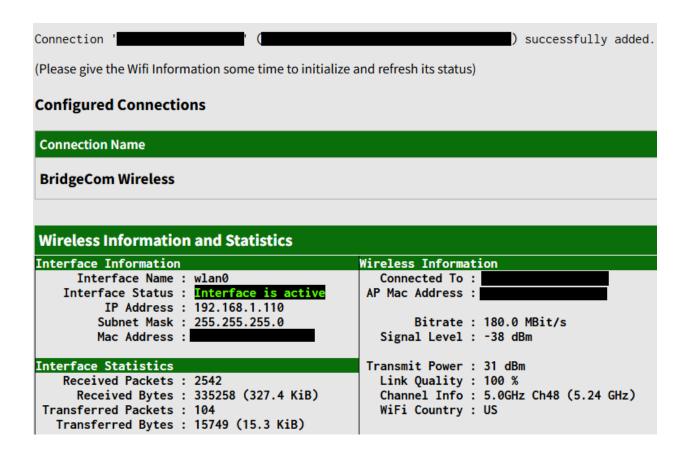

4. Repeat steps 1-3 in this section for each WiFi network.

#### **Using the External Battery**

For convenience, an external rechargeable battery is included with the SkyBridge Max. This is a USB power bank for powering the SkyBridge Max on-the-go.

1. Completely charge the battery before using it. Use the USB Type C connector to charge it.



2. After the battery is completely charged, unplug the charging cable from the battery, and use one of the USB Type A ports to supply power to your SkyBridge Max.



For further support, create a ticket on our support page at the following link:

https://support.bridgecomsystems.com/kb-tickets/new